



GLASS DOOR AND FRAMES INSTALLATION INSTRUCTIONS

For Use With DESA Masonry Wood Burning Firebox Models JM and GM Series

INSTALLING DOOR FRAMES

1. Remove screws from smoke shelf (see Figure 1).
2. Mount top door frame and secure with screws provided (see Figure 1).
3. Place bottom door frame on top of ash lip at front of fireplace (see Figure 2).
4. Secure bottom door frame to brick with two hex screws provided as shown in Figure 3 using a 7/16" open end or adjustable wrench.

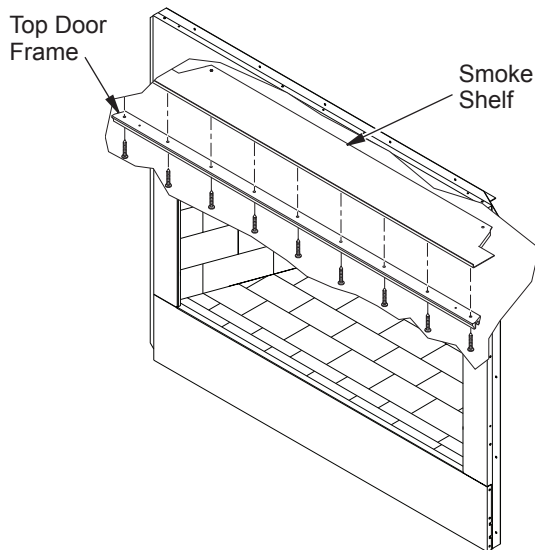


Figure 1 - Installing Top Door Frame

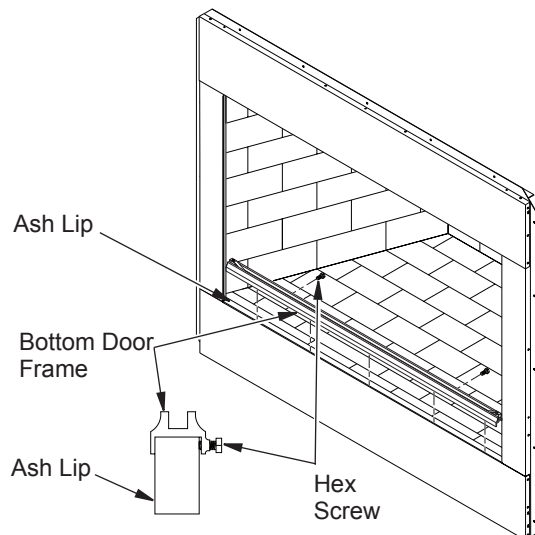


Figure 2 - Installing Bottom Door Frame

INSTALLING GLASS DOORS

Spring clips have been installed but minor adjustments may still be needed.

1. With bi-fold door completely folded, insert bottom pivot pin into hole located at bottom corner of bottom door frame as shown in Figure 3.
2. Swing door to vertical position and make sure top pins slide into door track. Door pin should snap onto the clip when vertical.
3. Repeat for other door.

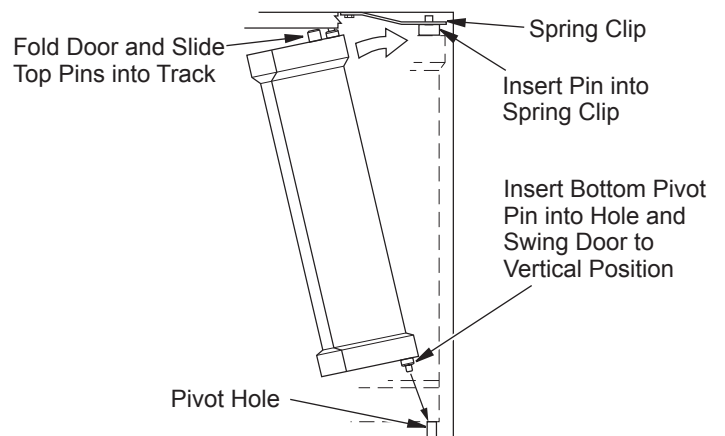


Figure 3 - Install Bi-fold Door

DOOR ADJUSTMENT

Remove door and slightly loosen upper spring clips. Replace and fully close doors. Use 1/8" shims to level doors. Once proper setting is achieved, carefully open doors enough to access pivot and spring clips with a Phillips head screw driver. Tighten screws (see Figure 4).

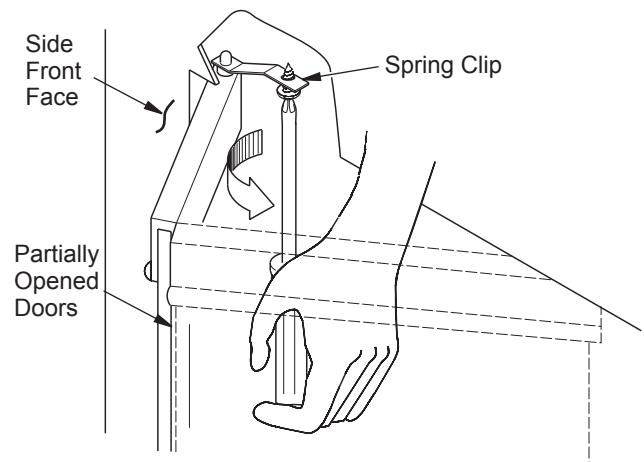


Figure 4 - Adjusting Door



2701 Industrial Drive
P.O. Box 90004
Bowling Green, KY 42102-9004
www.desatech.com



118262 01

NOT A UPC